
Type AW - Alphawedge

Designed for Ribdeck® E60 profiles manufactured by Hare Decking (formerly Richard Lees®).




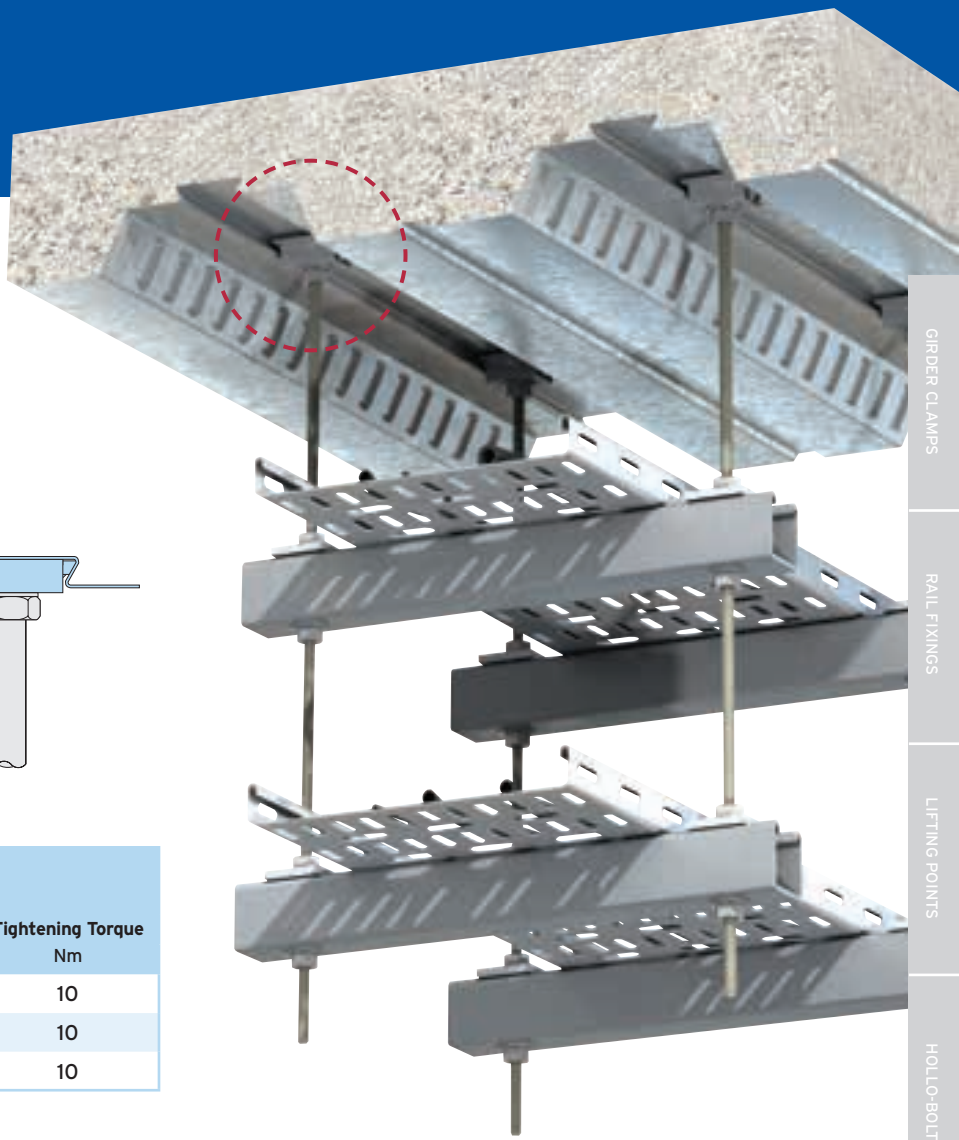

Locking Plate: Pre-galvanised strip
Wedge: Malleable iron, zinc plated.

Product Code	Rod min 4.6	Safe Working Load (3:1 FOS) Tensile / 1 Rod kN	Tightening Torque Nm
AW06	M6	1.0	10
AW08	M8	1.0	10
AW10	M10	1.0	10

How to install...

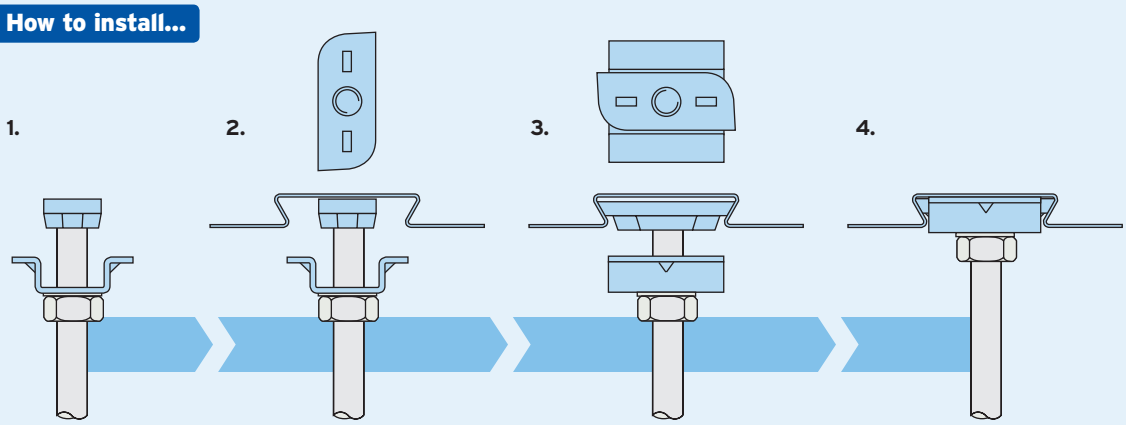

1) Pre-assemble the locking plate and wedge (flat surface up) onto the threaded rod.
2) Insert the wedge into the re-entrant channel of the decking and rotate 90°.
3) Slide the plate up the threaded rod, over the wedge, to lock it in position into the channel.
4) Tighten the locknut beneath the plate to hold the assembly in position.

- **Install the decking fixings after the concrete has been poured and has reached full strength.**
- **If the decking profile is deformed or distorted, do not install the fixing. If in doubt, contact the Technical Support team for advice.**